



Roots

EasyAir™8000 Indoor Installation

When EasyAir™8000 packages are installed inside a building, following factors must be considered for the design of the room ventilation system. Inadequate or lack of room ventilation will create excessive temperatures around the blower, motor and accessories leading to equipment failure.

1. Heat rejection from the package: The package will reject about 15 to 20% of the motor BHP into the building. This consists of motor heat loss, V-belt loss, blower radiation loss, silencer radiation loss and heat radiated from accessories.

$$\text{PKHL} = \text{Package Heat Loss in Btu/Mt} = 0.2 * \text{Motor HP} * 42.4$$

$$= 8.48 * \text{Motor HP}$$

2. Piping Heat Loss: The discharge piping inside the building will radiate heat inside the room.

$$\text{PHL} = \text{Piping heat loss in Btu/Mt} = A * Y * (T_2^4 - T_1^4)$$

A= Piping surface area in Sq.Ft.

$$Y = \text{Radiation Constant} = 2.855 \times 10^{-11} \text{ Btu/Sqft/Mt/R}^4$$

T₂ = Piping surface temperature in Rankine

T₁ = Room temperature in Rankine

$$\text{Total Heat Load} = \text{PKHL} + \text{PHL} = W * C_p * \Delta t$$

W= Ventilation air flow in Lb/Mt, C_p= Specific heat for air = .24 Btu/Lb .° R

Δt = Room temperature rise above outside temperature in ° F

V= Ventilation air flow in CFM = W/ ρ , where ρ is air density in Lb/Cubic Ft

Room ventilation system should be sized to keep the room temperature no more than 5 ° F above maximum outside temperature of 100 ° F. If outside temperature exceeds 100 ° F, special motor insulation will be required.

Piping heat loss could be reduced by lagging the piping with insulation.

On vacuum service, do not discharge blower exhaust inside the building, pipe the exhaust to the outside.

Dresser ROOTS, Dresser, Inc.

16240 Port Northwest Drive • Houston, TX 77041 • Phone: 832.590.2600 • Fax: 832.590.2325 • www.rootsblower.com



Roots

It is also recommended that the exposed discharge piping be lagged with insulation to reduce noise inside the building. Package noise guarantee does not include noise from the external inlet/discharge piping supplied by others.

Example- Ventilation Air Flow Determination

Motor BHP = 100

Outside Temperature = 95° F = 460+95= 555 ° R

Room Temperature = 100 ° F= 460+100= 560 ° R

Blower Discharge Temperature = 280 ° F= 460+280= 740 ° R

Discharge Pipe= 6" diameter, 30 Feet long.

Surface area A= 3.14*(6/12)*30 = 47.1 Sq.Ft

Package Heat Loss = 8.48*100= 848 Btu/Mt

Piping Heat Loss= 47.1*2.855x10⁻¹¹ *(740⁴-560⁴) = 293 Btu/Mt

Total Heat Load = 848+293= 1141 Btu/Mt

W = 1141/.24/5 = 950.8 Lb/Mt

At sea level and at 95° F, Density of air ρ = 14.7*144/53.3/555=
.071 Lb/Cubic ft

Ventilation Air Flow = 950.8/.071 = 13,391 CFM

For multiple packages installed in a room, add up the heat load from each package and piping losses to calculate required ventilation flow.

July 11, 2006

Dresser ROOTS, Dresser, Inc.

2

16240 Port Northwest Drive • Houston, TX 77041 • Phone: 832.590.2600 • Fax: 832.590.2325 • www.rootsblower.com

The original **ROOTS** *blower*™